

Hold headset before fitting
Hold with your thumb and first two
fingers, the Soft Spring upward and the
speaker outlet pointing toward your ear.



Compress foam tip
Roll and compress the tip as small as
possible: the cylinder should be free
from wrinkles.



Place headset in ear Insert the headset fully into your ear, while twisting it backwards. The base has to be horizontal.



Push headset fully into ear Pull your ear back and push the headset further into the ear canal. The BCM should not be visible once inserted.




Hold headset in ear Hold headset in your ear for 20 seconds until the foam has fully expanded.



Place Soft Spring in ear
Push the Soft Spring into the upper bend
of your ear to ensure a secure headset
fit and consistent pressure on the BCM.



Place Cable Retainer behind ear Place the Cable Retainer behind your ear to ensure the cable is held comfortably and securely over the ear.

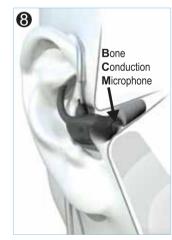

Plug and test headset on radio
Test your voice quality: if signal is low or
the headset is sitting loose, refit the
headset and/or try another foam tip size.