


Allows the user to know in real time with who he is communicating

- Level 0: No connection message
- Level 1: Network connection message
- Level 2: Safeline®: Message indicating with whom we are connected

Remark : The number of audio messages can be reduced from the configuration software: Message configuration tab

1 Start the APPI-Com 

2 Connect the audio device

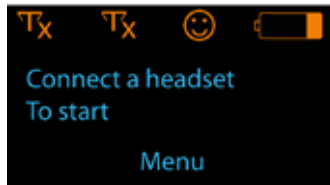






3 The voice message indicates the number of the connected APPI-Com. Indicates that the radio is received by other users

! THIS MODE REQUIRES YOU TO CONNECT YOUR HEADSET (WIRED OR BLUETOOTH) TO JOIN THE GROUP (STEP 2).


4 Connection to other radios
If the audio device is disconnected, the communication is disconnected and the screen returns to previous step (step 3).


5 Multi-connect message indicates that you are connected to at least one multi

Indicates to users the immobility of one of the team members.


- 1** Start the APPI-Com 
- 2** Press and hold down the button  to go to the menu
- 3** Select the menu (P) by using the buttons   and confirm by pressing 




- 4** Select the «On» press 

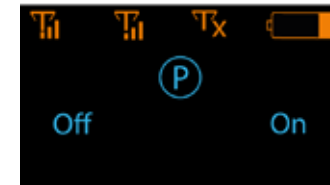

- 5** The radio returns to the general screen and the (P) indicates that the option is enabled :

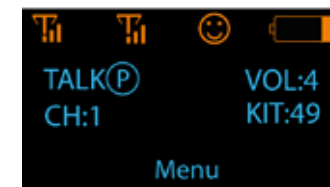

LWP disabling: steps 2,3 identical, and step 4: «Off» by pressing the 

In case of immobility:

- **EARLY-WARNING** : audible warning signal to the wearer to indicate his or her immobility
- **WARNING** : voice message to other crew members (ex: «APPI-Com 1 stationary») + audible indication to the stationary user

Important : The LWP function is not available on radios in multi mode.

The configuration software allows you to configure the LWP functionality «configuration tab». (Auto or manual start, delay + message repeat time, delay between early warning and voice alert).